


1810-1850


# Instructions for operating **BEHARIAN** Food-Cutter

Before switching on the machine please check whether the voltage is correct. The bowl must turn in the direction shown by an arrow (counter-clockwise). If three-phase machines turn in opposite direction, please, change the position of the poles in the plug. The machine can be switched on or off only when the cover is closed. Do not lift the cover when the machine is running.

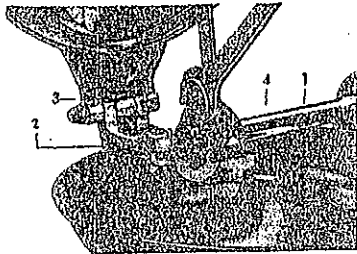


## Cleaning of the machine

Put out the link connecting bolt (3). Lift off the cover. Unscrew the wing nut (2) and take off the set of knives and the plastic sleeve. Unscrew the lock bolt (4) and take away the bowl. The body of the machine and the knife shaft should be cleaned with a wet cloth. The removed parts like cover, bowl, etc. can be cleaned in warm water. Dry up all parts carefully and put some grease on the knife shaft, the link connecting bolt and the threads.

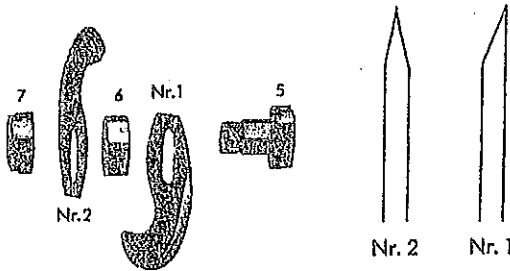


## Assembling the knives

- 1) a set of two knives  
Put knife No. 1 (sharpened on one side) on the knife holder (5) with the flat side down. Then put on the spacing washer (6) and the knife No. 2 (sharpened on both sides). Afterwards tighten nut (7) by hand. For final adjustment place the set of knives on the knife shaft and tighten the wing nut (2). Then adjust the knives so that they clear the bowl with a distance of 1-2 mm (1/24" to 1/12"). Check the distance by moving knife shaft and bowl by hand. Then tighten the nut (7) on the knife holder (5) with the two wrenches.
- 2) a set of three knives  
Put on the knife holder (5) a knife No. 1, then a small spacing washer, another knife No. 1 and another small spacing washer and finally the knife No. 2 and the nut (7). Further process as above. Make sure that the three knives are cutting in the same order as they are mounted, that means: No. 1, No. 1, No. 2.

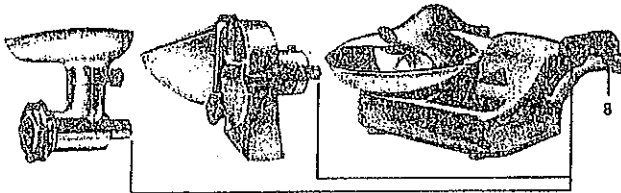


## Universal Food-Cutter with attachments

Put the male coupling of the attachment (Meat Chopper or Vegetable Slicer) in the female coupling of the gear box and tighten it with the star knob (8). The attachments should be taken off when only the bowl is used in order to avoid any wearing.

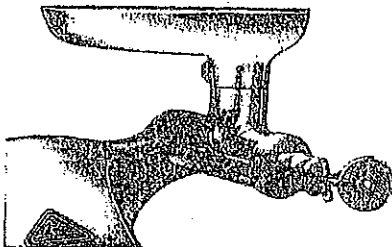


## Fitting the cutting set of the Meat Chopper attachment

Put the knife and the plate on the knife holder of the worm and tighten the ring nut slightly by hand. The cutting set gets blunt quickly when working without meat. If meat comes out unsatisfactorily, the cutting set has not been fitted properly or it is blunt or uneven.

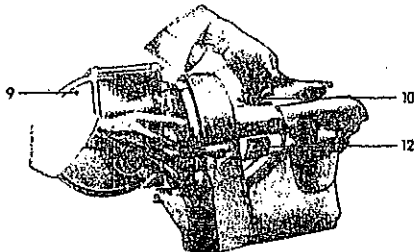

## Fitting the slicer-, shredder- or grater plates

After opening the door (9) of the vegetable slicer attachment and after lifting the catch bolt (10), the plate can be put into the device. Turn it at the same time until it is engaged in the female coupling of the machine. Then release the catch bolt (10) and after closing the door the device is ready to operate. It is advisable to put a drop of oil on the shaft after having cleaned it in order to avoid wear by friction.

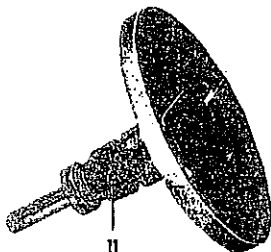

## Adjustment of the thickness of slices

The slicer plate can be adjusted to the thickness desired by turning the nut (11). The nut (11) can be reached by the opening (12) in the underside of the device when the slicer plate is fitted into the device. It is not necessary to take out the plate for adjusting the thickness.